



ART NR.: 66000755

FERNBEDIENUNG GLASS TOUCH DMX 1-KANAL UND 1-KANAL II – MONTAGE- UND GEBRAUCHSANWEISUNG.

Um einen bestimmungsgemäßen und gefahrlosen Betrieb sicherzustellen, müssen Sie diese Bedienungsanleitung beachten!

Diese Anleitung gilt ausschließlich in Verbindung mit den mitgelieferten Produkten. Sie enthält wichtige Hinweise zur Inbetriebnahme und Handhabung und ist fester Bestandteil des Produkts. Achten Sie hierauf, auch wenn Sie dieses Produkt an Dritte weitergeben.

1. ALLGEMEINE INFORMATIONEN ZUR BESTIMMUNGSGEMÄSSEN VERWENDUNG

Die Glass Touch Fernbedienung dient zur Erweiterung der Glass Touch DMX Serie. Das Gerät wurde für den Betrieb im Innenbereich konzipiert. Nicht für den Einsatz unter Wasser geeignet.

Lesen Sie die Sicherheitshinweise aufmerksam durch. Die Installation des Gerätes ist nur durch eine qualifizierte Elektrofachkraft durchzuführen!

2. SICHERHEITSHINWEISE

Die Sicherheitshinweise und auch alle anderen Informationen dieser Bedienungsanleitung sind unbedingt zu befolgen.



Dieses Symbol wird in dieser Bedienungsanleitung verwendet, wenn Gefahr durch einen elektrischen Schlag besteht.



Dieses Symbol weist auf allgemeine Gefahren hin bzw. auf wichtige Informationen, die unbedingt zu beachten sind.



Das Pfeil-Symbol wird verwendet, wenn besondere Informationen oder Tipps gegeben werden.



WARNUNG ELEKTRISCHE SPANNUNG!

UNSACHGEMÄSSE UND LAIENHAFT VORGEHENSWEISE BEIM ANSCHLIESSEN DES LED-STRAHLERS IST LEBENSGEFÄHRLICH.

- » Die Installation des Gerätes darf nur durch eine qualifizierte Elektrofachkraft erfolgen. Anschlüsse Spannungsfrei schalten und gegen Wiedereinschalten sichern!
- » Vergewissern sie sich, dass sich keine elektrischen Leitungen hinter geplanten Bohrstellen befinden.
- » Das Gerät darf nicht umgebaut, zerlegt oder verändert werden.
- » Wenn das Gerät beschädigt ist oder nicht richtig arbeitet, so darf es nicht mehr betrieben werden, schalten Sie die Netzspannung ab. Lassen Sie das Gerät anschließend von einem Fachmann prüfen.
- » Nicht für den Einsatz an Fahrzeugen oder unter Wasser geeignet.



GEFAHR VERLETZUNGSGEFAHR, GEFAHR VOR ERBLINDEN

LED-LICHT STRAHLT SEHR HELL. DER BLICK IN EINE LED-LICHTQUELLE KANN DIE AUGEN SCHÄDIGEN.

- » Blicken Sie niemals direkt oder mit optischen Instrumenten in das Licht von LED-Leuchtmitteln.



EXPLOSIONSGEFAHR

IN RÄUMEN BZW. UMGEBUNGSBEDINGUNGEN IN DENEN EXPLOSIVE ODER BRENNBARE GASE, DÄMPFE ODER STÄUBE VORHANDEN SIND, DARF DAS GERÄT NICHT BETRIEBEN WERDEN. ES BESTEHT EXPLOSIONS- UND BRANDGEFAHR.

- » Nicht in explosions- oder brandgefährdeten Bereichen montieren und betreiben.



Beachten Sie in gewerblichen Einrichtungen die Unfallverhütungsvorschriften des Verbandes der gewerblichen Berufsgenossenschaften für elektrische Anlagen und Betriebsmittel.

» Beachten Sie für die zulässige Spannung das Kapitel „7. Technische Daten“ am Ende dieser Montage- und Gebrauchsanleitung.

.....

HAFTUNGSAUSSCHLUSS


Bei Schäden am Produkt, die durch Nichtbeachten dieser Bedienungsanleitung verursacht werden, erlischt der Garantieanspruch und die Gewährleistung. Wir haften nicht für Folgeschäden, die sich daraus ergeben.

Gleiches gilt bei Sach- und Personenschäden, die durch unsachgemäße Handhabung oder Nichtbeachten der Sicherheitshinweise verursacht werden.

.....

3. GLASS TOUCH DMX FERNBEDIENUNG

Die Glass Touch DMX Fernbedienung wird in Verbindung mit dem passenden Glass Touch verwendet. Somit lässt sich das an der Wand montierte Glass Touch Gerät auch von überall im Raum steuern.

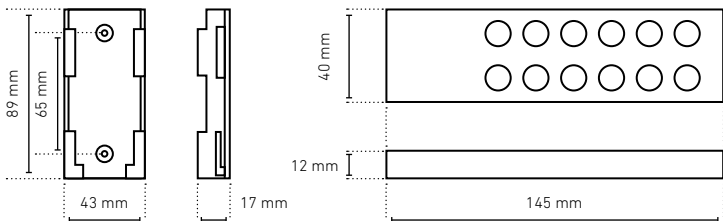

INHALT:

1x Glass Touch DMX Fernbedienung

1x Haltevorrichtung

1x Bedienungsanleitung

OPTIONALES ZUBEHÖR FÜR:

Artikel-Nr. 66000750


Glass Touch DMX 1-Kanal

Artikel-Nr. 66000751

Glass Touch DMX 1-Kanal II



4. TASTENBELEGUNG

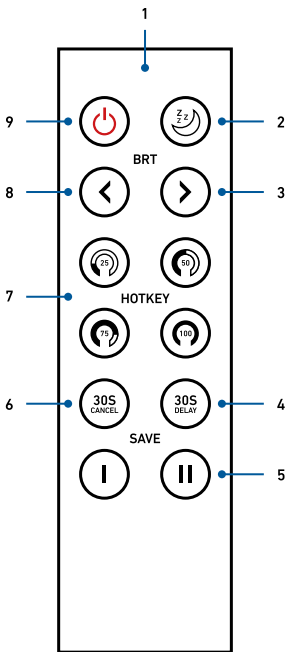

1 STATUS LED

Die Status LED zeigt an, wann die Fernbedienung sendet.

2 NACHTLICHT MODUS

Mit der „Nachtlicht Modus“ Taste lässt sich das Licht auf eine angenehme Helligkeit für die Nacht dimmen.

3 EINE STUFE HELLER

Über „Eine Stufe heller“ können Sie die Helligkeit um eine Stufe erhöhen.

4 VERZÖGERTES AUSSCHALTEN

Wenn Sie die Taste „Verzögertes Ausschalten“ drücken, wird sich das Licht nach 30 Sekunden abschalten.

5 SCENE ABRUFEN / SPEICHERN

Bei längerem gedrückt halten einer „Scenen“ Taste können Sie die aktuelle Einstellung abspeichern und zu einem beliebigen Zeitpunkt über einen kurzen Druck wieder aufrufen.

6 VERZÖGERTES AUSSCHALTEN ABBRECHEN

Mit dieser Taste können Sie das „Verzögerte Ausschalten“ abbrechen.

7 VIER HELLIGKEITS-STUFEN

Über diese vier Tasten können Sie die Helligkeit auf die voreingestellten Stufen von 25%, 50%, 75% oder 100% ändern.

8 EINE STUFE DUNKLER

Über „Eine Stufe dunkler“ können Sie die Helligkeit um eine Stufe verringern.


9 POWER AN / AUS

Mit der „Power“ Taste lässt sich das Gerät An- und Ausschalten.


5. KOPPELN VON GERÄTEN

1. KOPPELN ZWISCHEN EINEM GLASS TOUCH GERÄT UND EINER FERNBEDIENUNG

1. Im eingeschalteten Zustand müssen Sie die Power Taste des Glass Touch-Geräts so lange gedrückt halten, bis die Status LEDs beginnen zu blinken.

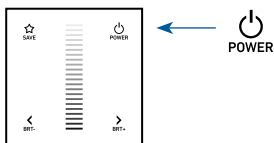


2. Direkt danach müssen Sie die Power Taste der Fernbedienung so lange gedrückt halten, bis die Status LEDs auf dem Glass Touch aufgehört haben zu blinken.

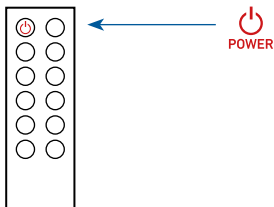

2. KOPPLUNG ZWEIER GERÄTE WIEDER AUFHEBEN:

Sie müssen die beiden unteren Eck-Tasten des B-Geräts ungefähr 3 Sekunden lang gedrückt halten bis die Status LEDs ein paarmal kurz aufblinken. Dies bedeutet, dass die Kopplung aufgehoben wurde.

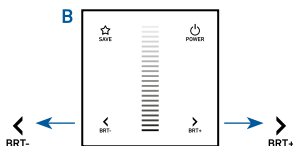

6. WARTUNG + PFLEGE

Die Glass Touch DMX Fernbedienung ist für Sie wartungsfrei. Zerlegen Sie das Gerät niemals. Durch nichtbeachten der in der Anleitung verwendeten Warnhinweise erlischt die Garantie des Geräts.

7. TECHNISCHE DATEN

GLASS TOUCH DMX FERNBEDIENUNG

Art. Nr.: 66000755

Betriebsspannung: 3 V DC (CR2032 Batterie)

Schutzklasse: III

Schutzgrad: IP 40

Ausgangssignale: RF 2.4 GHz

Max. zulässige Umgebungstemperatur: -30° C bis +55° C

Abmessungen: 145 x 40 x 12 mm

Verpackung: 150 x 46 x 18 mm

Gewicht: ~80 g

8. ENTSORGUNG



Bitte helfen Sie mit, Abfall zu vermeiden. Sollten Sie sich einmal von diesem Artikel trennen wollen, so bedenken Sie bitte, dass viele seiner Komponenten aus wertvollen Rohstoffen bestehen und wiederverwertet werden können. Entsorgen Sie ihn daher nicht in der Mülltonne, sondern führen Sie ihn bitte Ihrer Sammelstelle für Elektrogeräte zu.

Vielen Dank für Ihre Mithilfe!



Dieses Produkt erfüllt die Anforderungen der geltenden europäischen und nationalen Richtlinien. Die Konformität wurde nachgewiesen, die entsprechende Erklärungen und Unterlagen sind beim Hersteller hinterlegt.

* Änderungen vorbehalten

Barthelme
LED Solutions

STAND 08|2017

© JOSEF BARTHELME GMBH & CO. KG Oedenberger Straße 149 | 90491 Nürnberg | Germany
T +49 911 42476 0 F +49 911 42476 66 E info@barthelme.de

BARTHELME.DE



ITEM NO.: 66000755

REMOTE CONTROL GLASS TOUCH DMX 1 CHANNEL AND 1 CHANNEL II – INSTALLATION AND OPERATING INSTRUCTIONS.

It is important to adhere to these instructions to ensure a safe and intended use of this product!

This instruction is valid only for the included mentioned products. It contains important information regarding the installation and handling and is an integral part of this product. Make sure this is complied with if you should forward this product to third parties.

1. GENERAL INFORMATION REGARDING THE INTENDED PURPOSE

The Glass Touch is designed for the operation of compatible CHROMOFLEX Pro LED products. This device is built for installation and operation in indoor areas. It is not suitable for use on vehicles or under water.

Read the safety precautions carefully. The installation of the LED spot may only be performed by a certified electrician!

2. SAFETY ADVICE

The safety advice and all other information in these instructions must be followed.



This symbol is used in the instructions when danger from electric shock exists.



This symbol indicates general risks or important information which must be adhered to.



The arrow symbol is used when special information or tips are given.



WARNING ELECTRIC VOLTAGE!

IMPROPER AND UNPROFESSIONAL PROCEDURES WHILST CONNECTING THE LED LUMINAIRE CAN BE LIFE-THREATENING.

- » The installation of the LED luminaire may only be performed by a certified electrician. All connections must be disconnected and secured against being inadvertently switched back on!
- » Ensure that no electrical lines are behind planned drilling areas.
- » The device may not be disassembled, modified or changed in any way.
- » Should the device be damaged or not functioning correctly then it should not continue to be operated and must be removed from the power supply. Have the device inspected by a qualified technician.
- » It is not suitable for use on vehicles or under water.



DANGER RISK OF INJURY, RISK OF BLINDING

THE LED LUMINAIRE LUMINATES VERY BRIGHTLY. LOOKING INTO THE LIGHT SOURCE CAN DAMAGE THE EYES.

- » Never look directly or with optical instruments into the light of the LED luminaire.



RISK OF EXPLOSION

DO NOT USE THE PRODUCT IN AREAS OR AMBIENT CONDITIONS IN WHICH EXPLOSIVE OR COMBUSTIBLE GASES, FUMES OR DUST ARE PRESENT. THERE IS A RISK OF EXPLOSION AND FIRE.

- » Do not install and operate in explosive or fire endangered areas.



In commercial institutions it is necessary to observe the accident prevention regulations of the trade association for electrical systems and equipment.

» Observe the permissible voltage in Chapter „7. Technical Data“ at the end of these installation and operating instructions.

.....

EXCLUSION OF LIABILITY


Damage to the product, which is caused by non-observance of these instructions, voids any warranty claims and guarantees. Barthelme will not be liable for any consequential damages which may occur.

The same is valid for any material damages or personal harm which may occur as a result of improper handling and non-observance of the safety precautions.

.....

3. GLASS TOUCH DMX REMOTE CONTROL

The Glass Touch DMX remote control is used together with a compatible Glass Touch. In this way the Glass Touch which is installed in in the wall can be controlled from anywhere in the room.

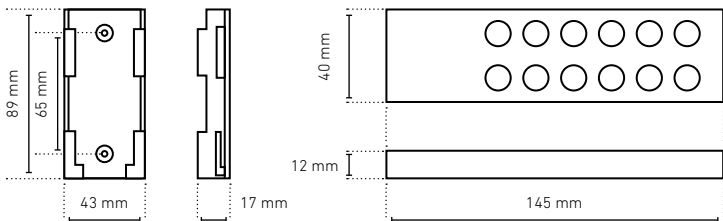

CONTENTS:

1x Glass Touch remote control

1x holding fixture

1x operating instructions


SUITABLE FOR:

Item No.: 66000750


Glass Touch DMX 1 Channel

Item No.: 66000751

Glass Touch DMX 1 Channel II

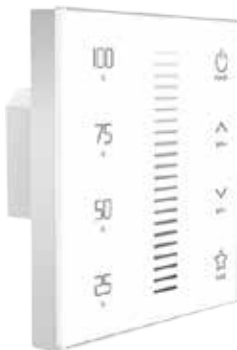

4. KEY ASSIGNEMENT

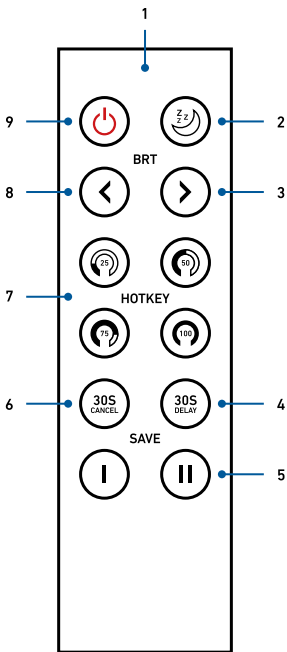

1 STATUS LED

The status LED shows when the remote control is transmitting.

2 NIGHT LIGHT MODE

The „Night light mode“ key dims the light to a pleasant level for night time.

3 ONE LEVEL LIGHTER

With the „One level lighter“ key you can increase the brightness by one level.

4 DELAY OFF

After pressing the „Delay off“ key the light will be switched off after 30 seconds.

5 SCENE RETRIEVAL / SAVE

By pressing and holding the „Scene“ key you can save the current settings and retrieve these settings at a later time by pressing the key briefly.

6 CANCEL DELAY OFF

With this key you can cancel the „Delay off“ command.

7 FOUR BRIGHTNESS LEVELS

With these four keys you can change the brightness to the preprogrammed levels of 25%, 50%, 75% or 100%.

8 ONE LEVEL DARKER

With the „One level darker“ key you can decrease the brightness by one level.


9 POWER ON / OFF

The „Power“ key switches the device on and off.


5. PAIRING OF DEVICES

1. PAIRING A GLASS TOUCH DEVICE AND A REMOTE CONTROL

1. While in On-mode you should press and hold the power button of the Glass Touch until the blue status LEDs begin to blink.

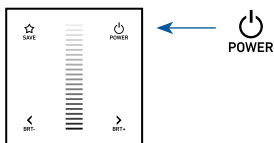


2. Immediately thereafter you must press and hold the power button of the remote control until the status LEDs of the Glass Touch stop blinking.

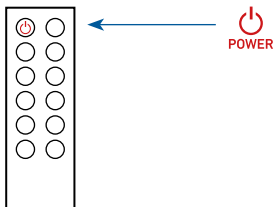

2. REMOVING PAIRING OF TWO DEVICES:

Press and hold both arrow buttons for approximately 3 seconds until the status LEDs flash a few times. This means that the pairing has been discontinued.

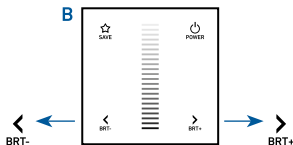

6. MAINTENANCE + CARE

The Glass Touch DMX remote control is maintenance free. Never disassemble the device. Never use aggressive cleaning agents when cleaning the device as this can lead to discoloration of the housing.

7. TECHNICAL DATA

GLASS TOUCH DMX REMOTE CONTROL

Item No.: 66000755

Operating voltage: 3 V DC (CR2032 battery)

Protection class: III

Degree of protection: IP 40

Output signals: RF 2.4 GHz

Max. permitted ambient temperature: -30° C to +55° C

Dimensions: 145 x 40 x 12 mm

Packaging: 150 x 46 x 18 mm

Weight: ~80 g

8. DISPOSAL



Please help us to protect the environment and avoid rubbish. Should you at some stage wish to dispose of this product then please consider that many of the components of this product consist of valuable raw materials which can be reutilized. Therefore please do not dispose of the product in the household rubbish but rather bring the article to your local collection point for electronic devices. **Thank you for your assistance!**



This product fulfills the requirements of valid European and national regulations. The conformity has been proved and the corresponding declarations and documents are available at the manufacturer.

* Subject to change

Barthelme
LED Solutions

VERSION 08|2017

© JOSEF BARTHELME GMBH & CO. KG Oedenberger Straße 149 | 90491 Nürnberg | Germany
T +49 911 42476 0 F +49 911 42476 66 E info@barthelme.de

BARTHELME.DE